



Instruction of Print Head Disassembly

Step 1 : Push both forks of TPH module equally to remove the TPH module out of the linkage

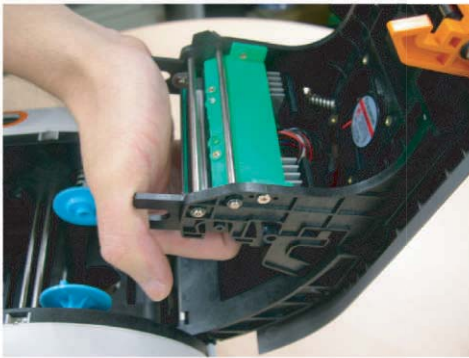

Ste 2 : Disconnect the TPH cable after the TPH is removed from the linkage.

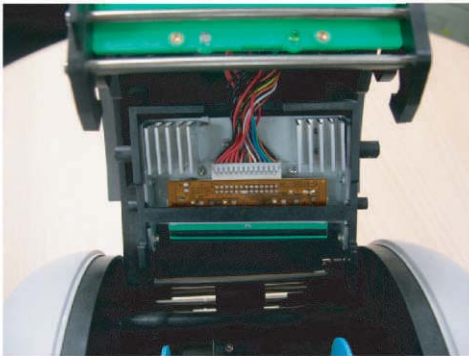

Reverse the steps above to install the new TPH module back



Note : During disassembly and installation , please be aware of the print head .



For more information contact:

CARDZ SMART SOLUTIONS PVT. LTD

No.38/5-11, 2nd Floor, 1st Main Road, Industrial Suburb,
Yeswanthpur, Bangalore 560 022. India.

Tel.: (80) 32991268, 65364444 (5 Lines)

E-mail: contact@cardz.in

website : www.cardz.in, www.cardtec.biz